


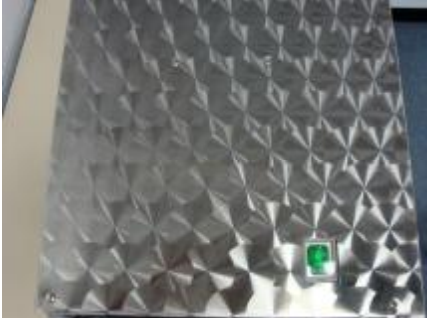

## System: Classic, Small Classic, Model II





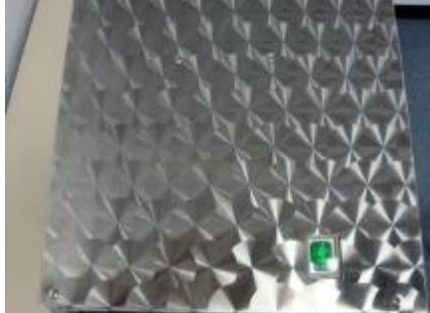
**Problem:** Machine is not heating up

**Possible Reasons:** The high temperature switch may have been tripped

**Brief Description:** If the machine is opened too fast, this can trip the high temperature switch.

**Solution:**

Steps	Illustrations
<p>Turn your machine on, and check to see if the light on the on/off switch is illuminated</p>	
<p>If the light is on, then turn off the machine, unplug the machine, and unscrew the four (4) screws that are on top of the machine</p> <p><b>Note:</b> Never work on a piece of equipment that is still plugged into a power source.</p>	
<p>Take the cover off to reveal a smaller cover, then unscrew the two (2) back screws and the one (1) side screw</p>	

<p>Pull the cover off a bit</p>	
<p>You will now see a cut out in the bottom plate that looks like this.</p> <p>Inside this cut out sits the high temperature switch. It can be round (like the one shown) or rectangular. This is the high temperature switch.</p> <p>No matter which model high temperature switch you have there will be two (2) wires and one (1) ground attached to it.</p> <p>More importantly is a button sticking out from the center</p>	
<p>Push on the small reset button with a pencil or pen, this will reset the high temperature switch.</p>	
<p>Close the small cover and put the three (3) screws back in</p>	
<p>Put the big cover back on and put the four (4) screws back in</p>	

*If you are still experiencing difficulties with your machine, please feel free to contact us at (514) 631-6222, or toll free at 1-877-631-2462.*